

embOS-Ultra

Real-Time Operating System

CPU & Compiler specifics for
RISC-V using Embedded Studio

Document: UM01079
Software Version: 5.18.0.0
Revision: 0
Date: January 20, 2023



A product of SEGGER Microcontroller GmbH

www.segger.com

Disclaimer

The information written in this document is assumed to be accurate without guarantee. The information in this manual is subject to change for functional or performance improvements without notice. SEGGER Microcontroller GmbH (SEGGER) assumes no responsibility for any errors or omissions in this document. SEGGER disclaims any warranties or conditions, express, implied or statutory for the fitness of the product for a particular purpose. It is your sole responsibility to evaluate the fitness of the product for any specific use.

Copyright notice

You may not extract portions of this manual or modify the PDF file in any way without the prior written permission of SEGGER. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

© 2010-2023 SEGGER Microcontroller GmbH, Monheim am Rhein / Germany

Trademarks

Names mentioned in this manual may be trademarks of their respective companies.

Brand and product names are trademarks or registered trademarks of their respective holders.

Contact address

SEGGER Microcontroller GmbH

Ecolab-Allee 5
D-40789 Monheim am Rhein

Germany

Tel. +49 2173-99312-0
Fax. +49 2173-99312-28
E-mail: support@segger.com*
Internet: www.segger.com

*By sending us an email your (personal) data will automatically be processed. For further information please refer to our privacy policy which is available at <https://www.segger.com/legal/privacy-policy/>.

Manual versions

This manual describes the current software version. If you find an error in the manual or a problem in the software, please inform us and we will try to assist you as soon as possible. Contact us for further information on topics or functions that are not yet documented.

Print date: January 20, 2023

Software	Revision	Date	By	Description
5.18.0.0	0	230120	MC	New software version.
5.14.0.1	0	211112	MC	New software version.
5.14.0.0	0	211105	MC	Initial version.

About this document

Assumptions

This document assumes that you already have a solid knowledge of the following:

- The software tools used for building your application (assembler, linker, C compiler).
- The C programming language.
- The target processor.
- DOS command line.

If you feel that your knowledge of C is not sufficient, we recommend *The C Programming Language* by Kernighan and Richie (ISBN 0--13--1103628), which describes the standard in C programming and, in newer editions, also covers the ANSI C standard.

How to use this manual

This manual explains all the functions and macros that the product offers. It assumes you have a working knowledge of the C language. Knowledge of assembly programming is not required.

Typographic conventions for syntax

This manual uses the following typographic conventions:

Style	Used for
Body	Body text.
Keyword	Text that you enter at the command prompt or that appears on the display (that is system functions, file- or pathnames).
Parameter	Parameters in API functions.
Sample	Sample code in program examples.
Sample comment	Comments in program examples.
Reference	Reference to chapters, sections, tables and figures or other documents.
GUIElement	Buttons, dialog boxes, menu names, menu commands.
Emphasis	Very important sections.

Table of contents

1	Using embOS	9
1.1	Installation	10
1.2	First Steps	11
1.3	The example application OS_StartLEDBlink.c	12
1.4	Stepping through the sample application	13
2	Build your own application	16
2.1	Introduction	17
2.2	Required files for an embOS	17
2.3	Change library mode	17
2.4	Select another CPU	17
3	Libraries	18
3.1	Naming conventions for prebuilt libraries	19
4	CPU and compiler specifics	20
4.1	Interrupt and thread safety	21
4.2	Thread-Local Storage TLS	22
4.2.1	API functions	22
4.2.1.1	OS_TLS_Set()	23
4.2.1.2	OS_TLS_SetTaskContextExtension()	24
5	Stacks	25
5.1	Task stack for RISC-V	26
5.2	System stack for RISC-V	26
5.3	Interrupt stack	26
6	Interrupts	27
6.1	RISC-V interrupt sources	28
6.2	RISC-V interrupt priorities	28
6.3	Zero-latency interrupts	28
6.4	RISC-V core-local interrupt modes	29
6.5	Interrupt handling with embOS for RISC-V	30
6.6	Interrupt-stack switching	58
7	RTT and SystemView	59
7.1	SEGGER Real Time Transfer	60
7.2	SEGGER SystemView	60

8	embOS Thread Script	61
8.1	Introduction	62
8.2	How to use it	62
9	Technical data	68
9.1	Resource Usage	69

Chapter 1

Using embOS

1.1 Installation

This chapter describes how to start with embOS. You should follow these steps to become familiar with embOS.

embOS is shipped as a zip-file in electronic form.

To install it, proceed as follows:

Extract the zip-file to any folder of your choice, preserving the directory structure of this file. Keep all files in their respective sub directories. Make sure the files are not read only after copying.

Note

The BSP projects at `/Start/BoardSupport/<DeviceManufacturer>/<Device>` assume that the `/Start/Lib` and `/Start/Inc` folders are located relative to the BSP folder. If you copy a BSP folder to another location, you will need to adjust these paths in the project.

Assuming that you are using an IDE to develop your application, no further installation steps are required. You will find many prepared sample start projects, which you should use and modify to write your application. So follow the instructions of section *First Steps* on page 11.

You should do this even if you do not intend to use the IDE for your application development to become familiar with embOS.

If you do not or do not want to work with the IDE, you should: Copy either all or only the library-file that you need to your work-directory. The advantage is that when switching to an updated version of embOS later in a project, you do not affect older projects that use embOS, too. embOS does in no way rely on an IDE, it may be used without the IDE using batch files or a make utility without any problem.

1.2 First Steps


After installation of embOS you can create your first multitasking application. You have received several ready to go sample start workspaces and projects and every other files needed in the subfolder `Start`. It is a good idea to use one of them as a starting point for all of your applications. The subfolder `BoardSupport` contains the workspaces and projects which are located in manufacturer- and CPU-specific subfolders.

To start with, you may use any project from `BoardSupport` subfolder.

To get your new application running, you should proceed as follows:

- Create a work directory for your application, for example `c:\work`.
- Copy the whole folder `Start` which is part of your embOS distribution into your work directory.
- Clear the read-only attribute of all files in the new `Start` folder.
- Open one sample workspace/project in `Start\BoardSupport\<DeviceManufacturer>\<CPU>` with your IDE (for example, by double clicking it).
- Build the project. It should be built without any error or warning messages.

After generating the project of your choice, the screen should look like this:

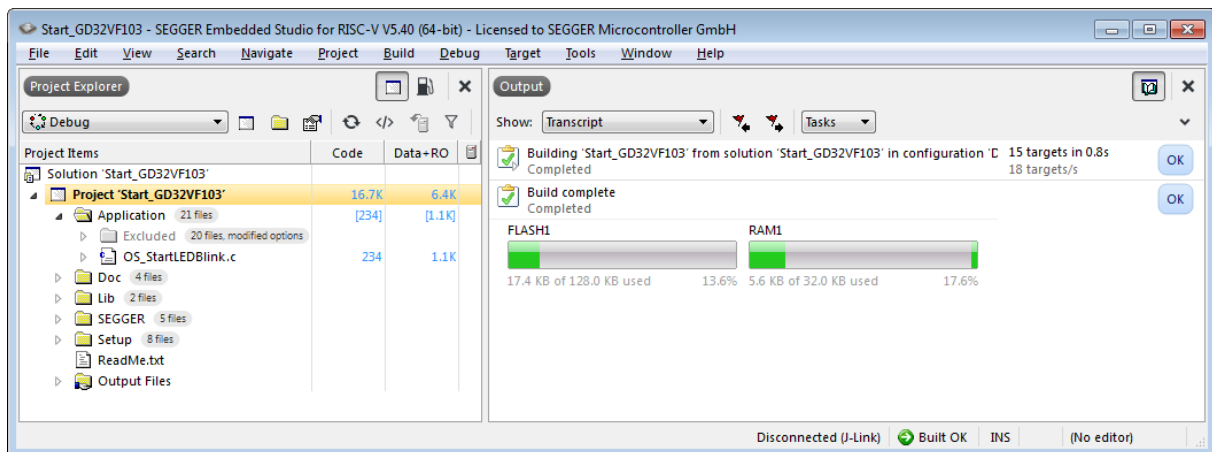

For additional information you should open the `ReadMe.txt` file which is part of every specific project. The `ReadMe` file describes the different configurations of the project and gives additional information about specific hardware settings of the supported eval boards, if required.

1.3 The example application OS_StartLEDBlink.c

The following is a printout of the example application OS_StartLEDBlink.c. It is a good starting point for your application. (Note that the file actually shipped with your port of embOS may look slightly different from this one.)

What happens is easy to see:

After initialization of embOS two tasks are created and started. The two tasks are activated and execute until they run into the delay, then suspend for the specified time and continue execution.

```

/*****
*                               SEGGER Microcontroller GmbH                               *
*                               The Embedded Experts                                   *
*****/

----- END-OF-HEADER -----
File      : OS_StartLEDBlink.c
Purpose   : embOS sample program running two simple tasks, each toggling
            a LED of the target hardware (as configured in BSP.c).
*/

#include "RTOS.h"
#include "BSP.h"

static OS_STACKPTR int StackHP[128], StackLP[128]; // Task stacks
static OS_TASK      TCBHP, TCBLP;                 // Task control blocks

static void HPTask(void) {
    while (1) {
        BSP_ToggleLED(0);
        OS_TASK_Delay(50);
    }
}

static void LPTask(void) {
    while (1) {
        BSP_ToggleLED(1);
        OS_TASK_Delay(200);
    }
}

/*****
*
*      main()
*/
int main(void) {
    OS_Init(); // Initialize embOS
    OS_InitHW(); // Initialize required hardware
    BSP_Init(); // Initialize LED ports
    OS_TASK_CREATE(&TCBHP, "HP Task", 100, HPTask, StackHP);
    OS_TASK_CREATE(&TCBLP, "LP Task", 50, LPTask, StackLP);
    OS_Start(); // Start embOS
    return 0;
}

/***** End of file *****/

```


1.4 Stepping through the sample application

When starting the debugger, you will see the `main()` function (see example screenshot below). The `main()` function appears as long as project option `Run to main` is selected, which it is enabled by default. Now you can step through the program.


`OS_Init()` is part of the embOS library and written in assembler; you can therefore only step into it in disassembly mode. It initializes the relevant OS variables.

`OS_InitHW()` is part of `RTOSInit.c` and therefore part of your application. Its primary purpose is to initialize the hardware required to generate the system tick interrupt for embOS. Step through it to see what is done.

`OS_Start()` should be the last line in `main()`, because it starts multitasking and does not return.

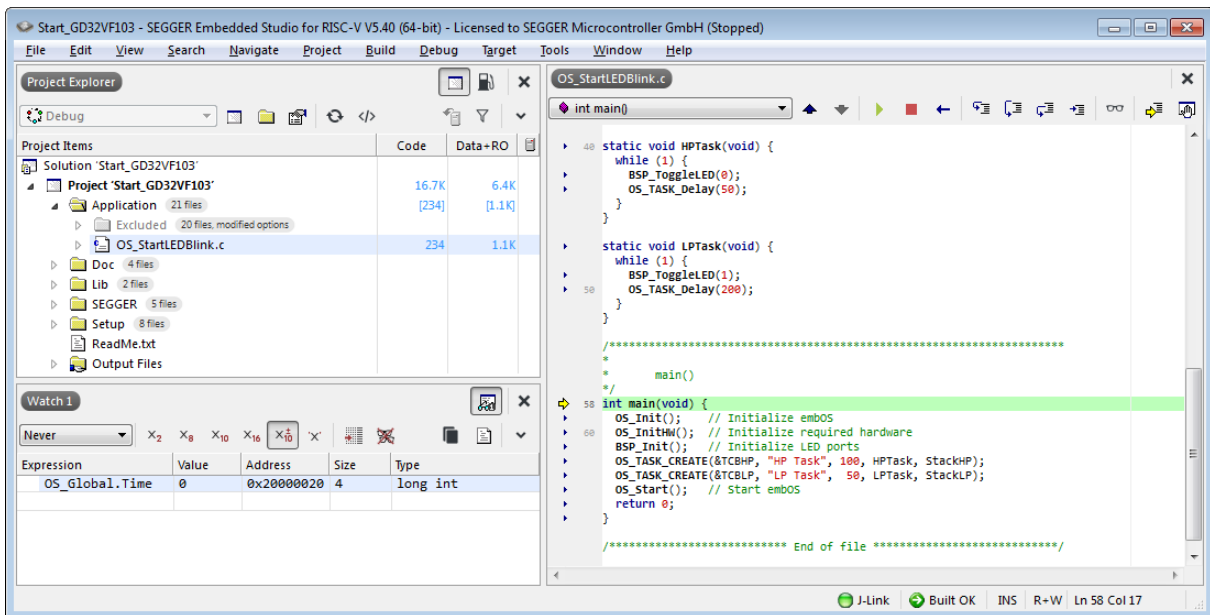


Before you step into `OS_Start()`, you should set two breakpoints in the two tasks as shown below.

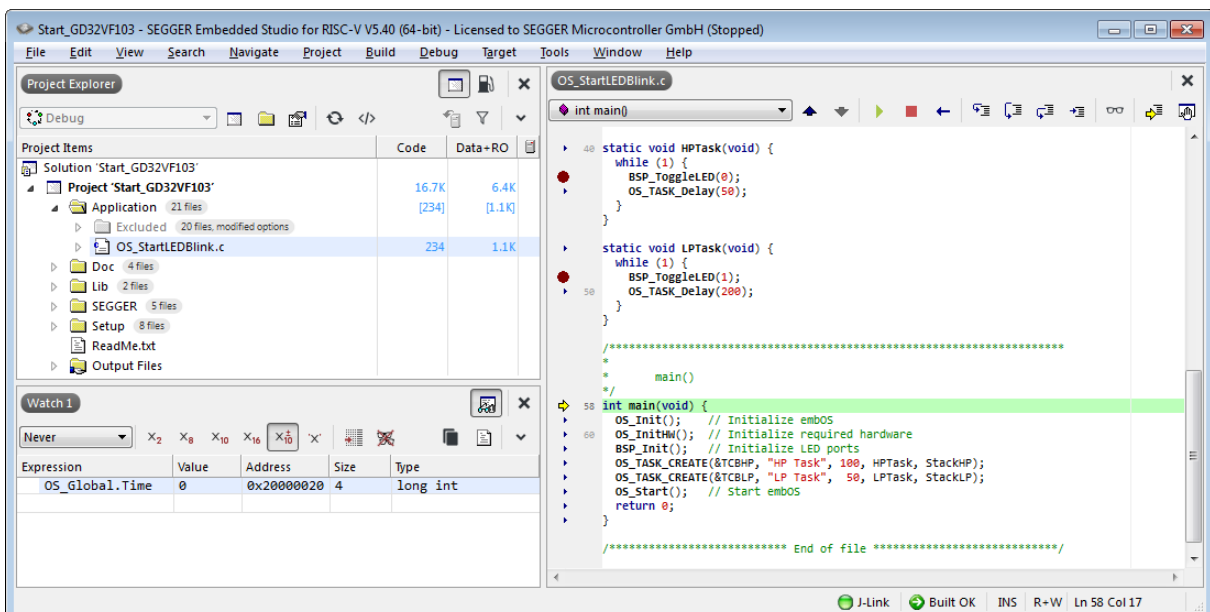


As `OS_Start()` is part of the embOS library, you can step through it in disassembly mode only.

Click **GO**, step over `OS_Start()`, or step into `OS_Start()` in disassembly mode until you reach the highest priority task.

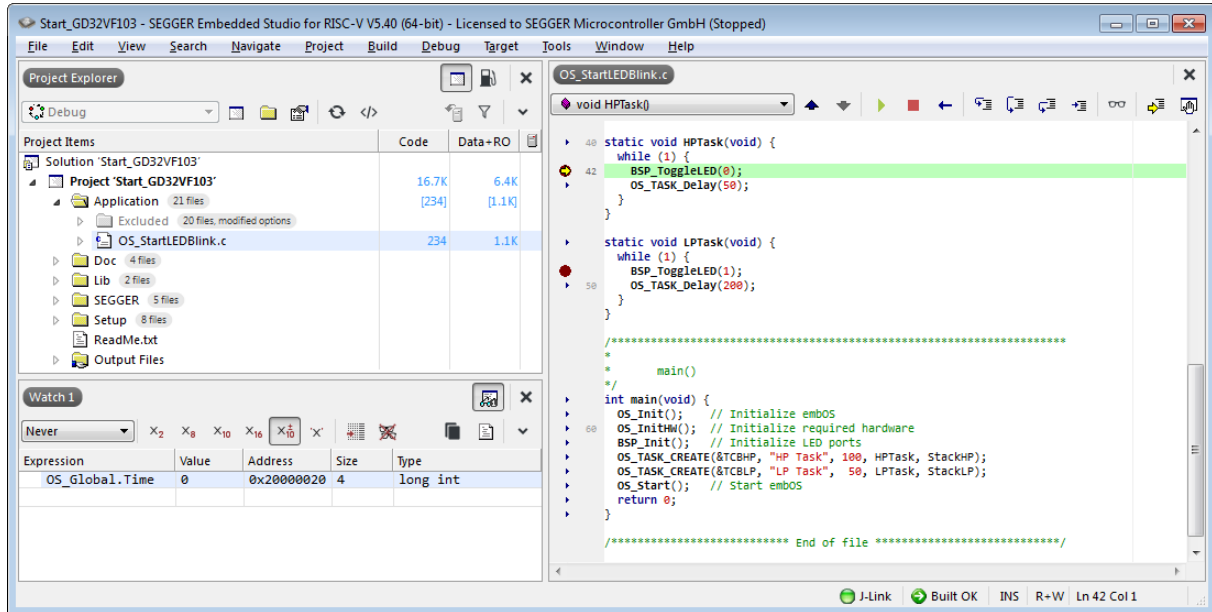


If you continue stepping, you will arrive at the task that has lower priority:

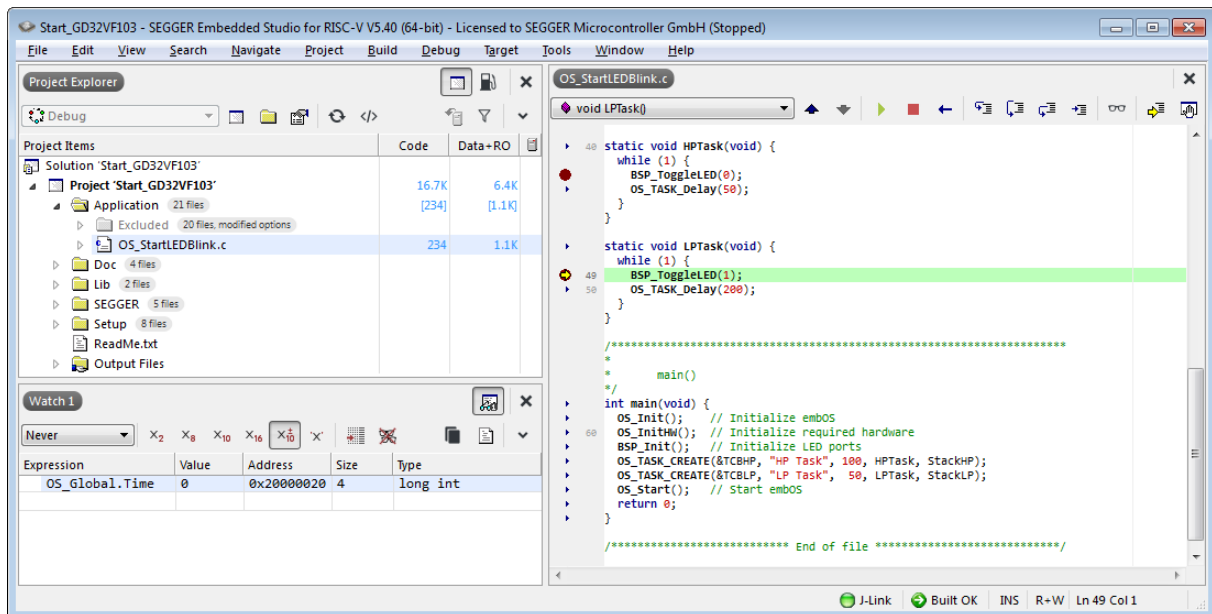


Continue to step through the program, there is no other task ready for execution. embOS will therefore start the idle-loop, which is an endless loop always executed if there is nothing else to do (no task is ready, no interrupt routine or timer executing).

You will arrive there when you step into the `OS_Task_Delay()` function in disassembly mode. `OS_Idle()` is part of `RTOSInit.c`. You may also set a breakpoint there before stepping over the delay in `LPTask()`.

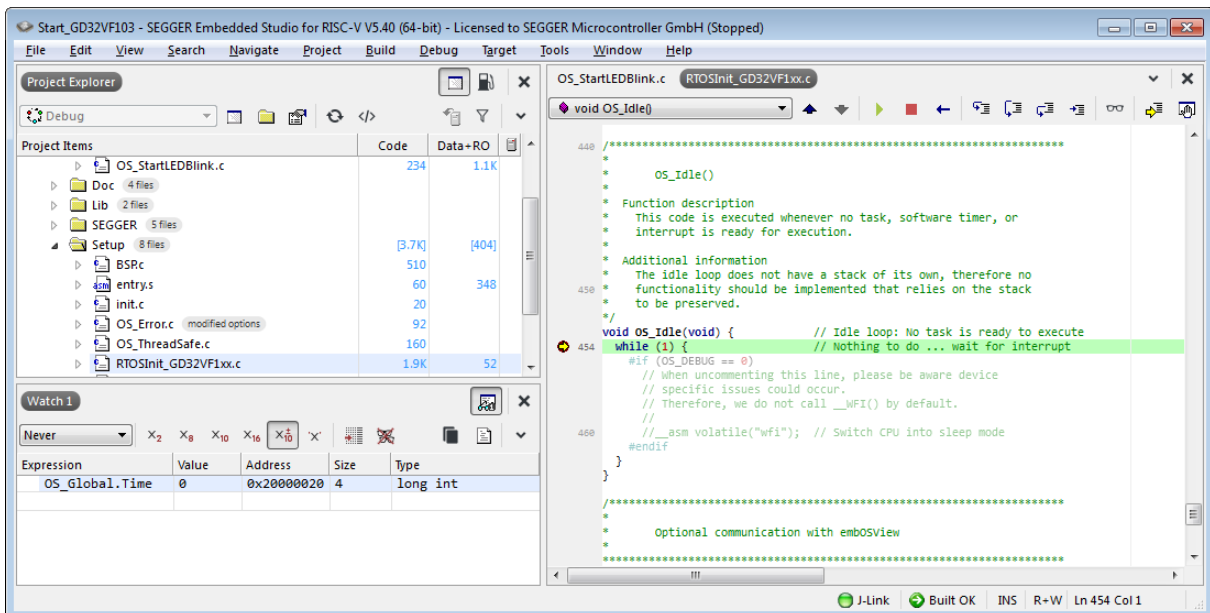

If you set a breakpoint in one or both of our tasks, you will see that they continue execution after the given delay.

As can be seen by the value of embOS timer variable `OS_Global.Time`, shown in the Watch window, `HPTask()` continues operation after expiration of the delay.

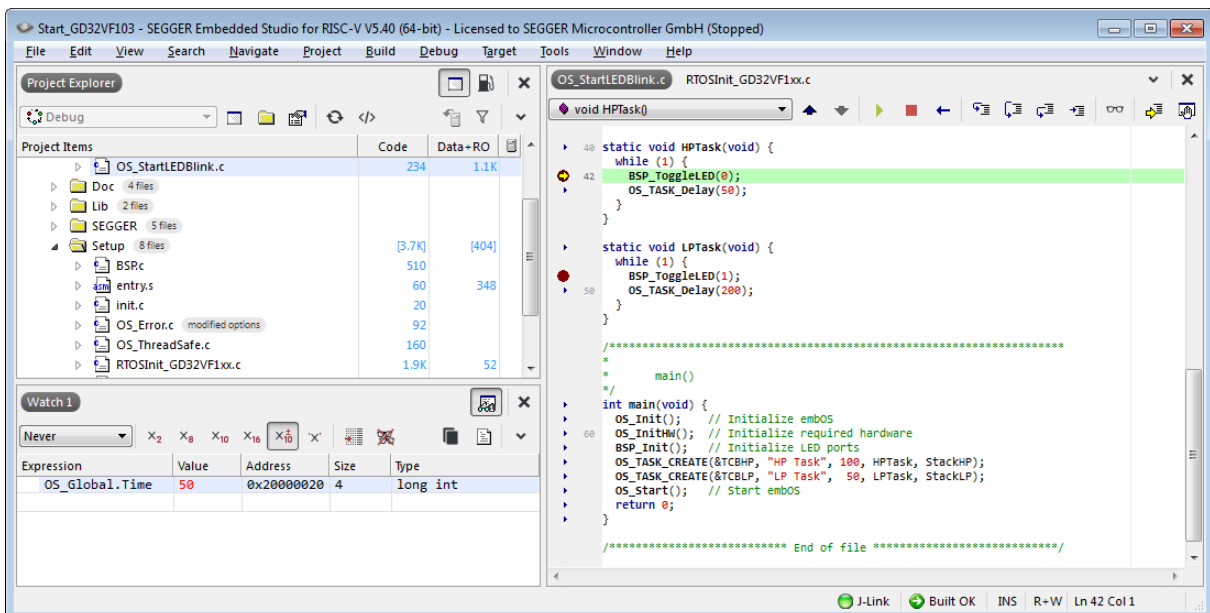

Chapter 2

Build your own application

2.1 Introduction

This chapter provides all information to set up your own embOS project. To build your own application, you should always start with one of the supplied sample workspaces and projects. Therefore, select an embOS workspace as described in chapter *First Steps* on page 11 and modify the project to fit your needs. Using an embOS start project as starting point has the advantage that all necessary files are included and all settings for the project are already done.

2.2 Required files for an embOS

To build an application using embOS, the following files from your embOS distribution are required and have to be included in your project:

- **RTOS.h** from the directory `.\Start\Inc`. This header file declares all embOS API functions and data types and has to be included in any source file using embOS functions.
- **RTOSInit*.c** from one target specific `.\Start\BoardSupport\<Manufacturer>\<MCU>` subfolder. It contains hardware-dependent initialization code for embOS. It initializes the system timer interrupt but can also initialize or set up the interrupt controller, clocks and PLLs, the memory protection unit and its translation table, caches and so on.
- **OS_Error.c** from one target specific subfolder `.\Start\BoardSupport\<Manufacturer>\<MCU>`. The error handler is used only if a debug library is used in your project.
- One **embOS library** from the subfolder `.\Start\Lib`.
- Additional CPU and compiler specific files may be required according to CPU.

When you decide to write your own startup code or use a low level `init()` function, ensure that non-initialized variables are initialized with zero, according to C standard. This is required for some embOS internal variables. Your `main()` function has to initialize embOS by calling `OS_Init()` and `OS_InitHW()` prior to any other embOS functions that are called.

2.3 Change library mode

For your application you might want to choose another library. For debugging and program development you should always use an embOS debug library. For your final application you may wish to use an embOS release library or a stack check library.

Therefore you have to select or replace the embOS library in your project or target:

- If your selected library is already available in your project, just select the appropriate project configuration.
- To add a library, you may add the library to the existing Lib group. Exclude all other libraries from your build, delete unused libraries or remove them from the configuration.
- Check and set the appropriate `OS_LIBMODE_*` define as preprocessor option and/or modify the `OS_Config.h` file accordingly.

2.4 Select another CPU

embOS contains CPU-specific code for various CPUs. Manufacturer- and CPU-specific sample start workspaces and projects are located in the subfolders of the `.\Start\BoardSupport` directory. To select a CPU which is already supported, just select the appropriate workspace from a CPU-specific folder.

If your CPU is currently not supported, examine all `RTOSInit.c` files in the CPU-specific subfolders and select one which almost fits your CPU. You may have to modify `OS_InitHW()`, the interrupt service routines for the embOS system tick timer and the low level initialization.

Chapter 3

Libraries

3.1 Naming conventions for prebuilt libraries

embOS is shipped with different pre-built libraries with different combinations of features.

The libraries are named as follows: `libos_rv<Arch>_<LibMode>.a`

Parameter	Meaning	Values
Arch	Specifies the RISC-V ISA	32imac : <i>RV32I</i> with <i>Zifencei</i> , <i>M</i> , <i>A</i> , <i>Zicsr</i> , and <i>C</i> extensions 32imc : <i>RV32I</i> with <i>Zifencei</i> , <i>M</i> , <i>Zicsr</i> , and <i>C</i> extensions
LibMode	Specifies the library mode	xr : Extreme Release r : Release s : Stack check sp : Stack check + profiling d : Debug dp : Debug + profiling dt : Debug + profiling + trace

Example

`libos_rv32imac_dp.a` is the library for a project using an RV32IMAC core with debug and profiling support.

Chapter 4

CPU and compiler specifics

4.1 Interrupt and thread safety

Using embOS with specific calls to standard library functions (e.g. heap management functions) may require thread-safe system libraries if these functions are called from several tasks or interrupts. Embedded Studio's system library provides functions, which can be overwritten to implement a locking mechanism making the system library functions thread-safe.

The Setup directory in each embOS BSP contains the file `OS_ThreadSafe.c` which overwrites these functions. By default they disable and restore embOS interrupts to ensure thread safety in tasks, embOS interrupts, `OS_Idle()` and software timers. Zero latency interrupts are not disabled and therefore unprotected. If you need to call e.g. `malloc()` also from within a zero latency interrupt additional handling needs to be added. If you don't call such functions from within embOS interrupts, `OS_Idle()` or software timers, you can instead use thread safety for tasks only. This reduces the interrupt latency because a mutex is used instead of disabling embOS interrupts.

You can choose the safety variant with the macro `OS_INTERRUPT_SAFE`.

- When defined to 1 thread safety is guaranteed in tasks, embOS interrupts, `OS_Idle()` and software timers.
- When defined to 0 thread safety is guaranteed only in tasks. In this case you must not call e.g. heap functions from within an ISR, `OS_Idle()` or embOS software timers.

Alternatively, embOS delivers its own thread-safe functions for heap management. These are described in the embOS generic manual.

4.2 Thread-Local Storage TLS

Embedded Studio's standard library supports usage of thread-local storage. Several library objects and functions need local variables which have to be unique to a thread. Thread-local storage will be required when these functions are called from multiple threads.

embOS for Embedded Studio is prepared to support the thread-local storage, but does not use it per default. This has the advantage of no additional overhead as long as thread-local storage is not needed by the application. The embOS implementation of thread-local storage allows activation of TLS separately for each task.

Only tasks that are accessing TLS variables, for instance by calling functions from the system library, need to initialize their TLS by calling an initialization function when the task is started. For each task that uses TLS the memory for the thread-local storage is allocated on the heap. Therefore, thread-safe heap management should be used together with TLS. For information on thread safety, please refer to *Interrupt and thread safety* on page 21.

When the task terminates by a call of `OS_TASK_Terminate()`, the memory used for TLS is automatically freed and put back into the free heap memory.

Library objects that need thread-local storage when used in multiple tasks are for example:

- error functions - `errno`, `strerror`.
- locale functions - `localeconv`, `setlocale`.
- time functions - `asctime`, `localtime`, `gmtime`, `mktime`.
- multibyte functions - `mbrlen`, `mbrtowc`, `mbsrtowc`, `mbtowc`, `wcrtomb`, `wcsrtomb`, `wctomb`.
- rand functions - `rand`, `srand`.
- etc functions - `atexit`, `strtok`.
- C++ exception engine.

4.2.1 API functions

Routine	Description	main	Priv Task	Unpriv Task	ISR	SW Timer
<code>OS_TLS_Set()</code>	Initializes the thread local storage for the current task.		•			
<code>OS_TLS_SetTaskContextExtension()</code>	Initialize the extended task context for thread local storage.		•			

4.2.1.1 OS_TLS_Set()

Description

Initializes the thread local storage for the current task. Must be called from a task only.

Prototype

```
void OS_TLS_Set(void);
```

Example

```
static void Task(void) {  
    OS_TLS_Set();  
    OS_TASK_SetContextExtension(&OS_TLS_ContextExtension);  
    while (1) {  
    }  
}
```

4.2.1.2 OS_TLS_SetTaskContextExtension()

Description

Initialize the extended task context for thread local storage. Has to be called once when starting the task when TLS shall be used.

Prototype

```
void OS_TLS_SetTaskContextExtension(void);
```

Example

The following printout demonstrates the usage of task specific TLS in an application.

```
#include "RTOS.h"

static OS_STACKPTR int StackHP[128], StackLP[128]; // Task stacks
static OS_TASK      TCBHP, TCBLP;                // Task control blocks

static void HPTask(void) {
    OS_TLS_SetTaskContextExtension();
    while (1) {
        errno = 42; // errno specific to HPTask
        OS_TASK_Delay(50);
    }
}

static void LPTask(void) {
    OS_TLS_SetTaskContextExtension();
    while (1) {
        errno = 1; // errno specific to LPTask
        OS_TASK_Delay(200);
    }
}

int main(void) {
    errno = 0; // errno not specific to any task
    OS_Init(); // Initialize embOS
    OS_Inithw(); // Initialize required hardware
    OS_TASK_CREATE(&TCBHP, "HP Task", 100, HPTask, StackHP);
    OS_TASK_CREATE(&TCBLP, "LP Task", 50, LPTask, StackLP);
    OS_Start(); // Start embOS
    return 0;
}
```


Chapter 5

Stacks

5.1 Task stack for RISC-V

Each task uses its individual stack. The stack pointer is initialized and set every time a task is activated by the scheduler. The stack-size required for a task is the sum of the stack-size of all routines, plus a basic stack size, plus size used by exceptions.

The basic stack size is the size of memory required to store the registers of the CPU plus the stack size required by calling embOS-routines.

For RISC-V CPUs, this minimum basic task stack size is about 160 bytes. Because any function call uses some amount of stack and every exception also pushes at least 80 bytes onto the current stack, the task stack size has to be large enough to handle one exception, too. We recommend at least 512 bytes stack as a start.

Note

Stacks for RV32I devices need to be 16-byte aligned. embOS ensures that task stacks are properly aligned. However, since this can result in unused bytes, the application should ensure that task stacks are properly aligned. This can be achieved by defining an array using the compilers `__attribute__` keyword with the `aligned(16)` attribute.

5.2 System stack for RISC-V

The minimum system stack size required by embOS is about 192 bytes (stack check & profiling build). However, since the system stack is also used by the application before the start of multitasking (the call to `OS_Start()`), and because software timers and C-level interrupt handlers also use the system stack, the actual stack requirements depend on the application.

The size of the system stack can be changed by modifying the project settings. We recommend a minimum stack size of 768 bytes for the system stack.

5.3 Interrupt stack

RISC-V does not support a dedicated hardware interrupt stack. This means that any interrupt might use any task stack or the system stack depending on which context it is interrupting. Consequently, each task stack would need to be large enough to handle (multiple) interrupts. However, since assigning additional memory to each individual task stack would consume large amounts of RAM, embOS for RISC-V offers API functions to switch to the system stack on interrupt entry.

The respective functions `OS_INT_EnterIntStack()` and `OS_INT_LeaveIntStack()` are described in the generic embOS manual.

Chapter 6

Interrupts

6.1 RISC-V interrupt sources

The *RISC-V Privileged Architecture Version 1.10* defines 16 generic *core-local interrupt sources*.

Of these, 3 address *machine mode* and are mandatory when implementing the architecture, while further 6 are mandatory only when their respective privilege level is implemented (i.e. 3 sources with *user mode* and 3 sources with *supervisor mode*). The remaining 7 generic core-local interrupt sources must not be implemented, but are *reserved* for future use.

In addition to these generic core-local interrupt sources, further core-local interrupt sources may be implemented with any specific RISC-V platform (up to 16 with *RV32I*).

Consequently, any RISC-V-compliant platform includes one *software interrupt*, one *timer interrupt* and one *external interrupt* for each privilege level it implements, as well as a variable number of platform-specific core-local interrupts.

While the *timer interrupt* serves interrupt requests generated by any RISC-V platforms' mandatory real-time counter, the *software interrupt*, as its name suggests, serves interrupt requests generated by software.

The *external interrupt*, on the other hand, is used to serve a variable number of *global interrupts* which themselves are managed by a dedicated interrupt controller. Some implementations of the architecture include core-local interrupt management with the same interrupt controller, but most often core-local interrupt sources are managed locally.

By default, all interrupts (often referred to as "*traps*") are served in *machine mode*. Although *machine mode* interrupt service routines could technically redirect interrupts to the appropriate mode, this currently is not supported with embOS for RISC-V. Neither is the "*Machine Trap Delegation*" hardware feature.

6.2 RISC-V interrupt priorities

Multiple simultaneous interrupts at the same privilege level are handled in the following decreasing priority order: External interrupts, software interrupts, timer interrupts, then finally any synchronous traps.

External interrupts may further be prioritized by the dedicated interrupt controller depending on its implementation, while the priority of non-standard core-local interrupt sources relative to external, timer, and software interrupt sources is platform-specific.

For example, with *SiFive's "RISC-V Coreplex IP"*, the platform-specific core-local interrupt sources take precedence over any other interrupt source and are themselves prioritized by their index. Considering *machine mode* only, a comprehensive priority table for that platform (in decreasing order of priority) would therefore read as follows:

Trap name
Local interrupt 15
Local interrupt 14
...
Local interrupt 1
Local interrupt 0
Machine external interrupts (with configurable external priority)
Machine software interrupt
Machine timer interrupt
Synchronous trap

6.3 Zero-latency interrupts

Zero-latency interrupts are not supported with the current version of embOS for RISC-V.

6.4 RISC-V core-local interrupt modes

Typically, core-local interrupt handling is performed in *direct mode*:

In this mode, a RISC-V platform will route all core-local interrupts through a low-level interrupt service routine, which ultimately calls the appropriate high-level interrupt service routines for the respective core-local interrupt sources. For this purpose, the low-level interrupt service routine's address needs to be held in the *mtvec* register, which typically is set during start-up.

Alternatively, core-local interrupt handling may also be performed in *vectored mode*:

In this mode, a RISC-V platform will route all core-local interrupts through a properly aligned vector table containing jumps to the appropriate interrupt service routines for the respective core-local interrupt sources. For this purpose, the vector table's base address needs to be held in the *mtvec* register, which then typically needs to be set explicitly by the application. The application then also needs to tell the hardware to utilize vectored mode by setting the least-significant bit of that register.

Note

In vectored mode, both *synchronous exceptions* and *user mode software interrupts* are ambiguously vectored to the same exception handler.

6.5 Interrupt handling with embOS for RISC-V

Core-local interrupt handling

Addressing core-local interrupt handling, embOS for RISC-V offers API functions for:

- Generic RISC-V core-local interrupt handling (refer to *Core-local interrupt handling* on page 31)
- *NucleiSys' "Enhanced Core-Local Interrupt Controller"* (refer to *Core-local and global interrupt handling using ECLIC* on page 52)

When using embOS API functions on core-local interrupt sources, these may be specified using the following enumeration (where missing numerical values indicate *reserved* core-local interrupt sources):

Core-local interrupt source	Numerical value
IRQ_U_SOFTWARE	0
IRQ_S_SOFTWARE	1
IRQ_M_SOFTWARE	3
IRQ_U_TIMER	4
IRQ_S_TIMER	5
IRQ_M_TIMER	7
IRQ_U_EXTERNAL	8
IRQ_S_EXTERNAL	9
IRQ_M_EXTERNAL	11
IRQ_LOCAL0	16
IRQ_LOCAL1	17
IRQ_LOCAL2	18
IRQ_LOCAL3	19
IRQ_LOCAL4	20
IRQ_LOCAL5	21
IRQ_LOCAL6	22
IRQ_LOCAL7	23
IRQ_LOCAL8	24
IRQ_LOCAL9	25
IRQ_LOCAL10	26
IRQ_LOCAL11	27
IRQ_LOCAL12	28
IRQ_LOCAL13	29
IRQ_LOCAL14	30
IRQ_LOCAL15	31

Global interrupt handling

Addressing global interrupt handling, embOS for RISC-V offers API functions for:

- Generic "*RISC-V Platform-Level Interrupt Controller*" implementations (refer to *Global interrupt handling using PLIC* on page 37)
- *Lattice's "Programmable Interrupt Controller"* (refer to *Global interrupt handling using PIC* on page 43)
- *NucleiSys' "Enhanced Core-Local Interrupt Controller"* (refer to *Core-local and global interrupt handling using ECLIC* on page 52)

6.5.1 Core-local interrupt handling

6.5.1.1 Implementing core-local interrupt handlers in "C"

6.5.1.1.1 Low-level interrupt service routine

In direct mode, the individual interrupt service routines for distinct core-local interrupt sources need to be dispatched by a common low-level service routine. With embOS for RISC-V, this low-level routine is split into an assembler part called `trap_entry()`, which saves and restores the interrupted context, and a "C"-function called `OS_TrapHandler()`, which performs the actual dispatching of high-level service routines.

In vectored mode, embOS for RISC-V will not call `trap_entry()` at all, while `OS_TrapHandler()` is called exclusively to handle *synchronous traps* and *user mode software interrupts* (which ambiguously share the same vector in that mode).

embOS for RISC-V sample projects will typically implement `OS_TrapHandler()` in their respective `RTOSInit*.c` as shown in the example below, allowing for customization of that function. As this exemplary implementation of `OS_TrapHandler()` does not call any embOS API functions, it does not need to include a prologue and an epilogue as described in the generic embOS manual.

Example

```
#if (USE_VECTORED_INT_MODE == 0)
static OS_IRQ_HANDLER* _apfIRQHandler[NUM_LOCAL_INTERRUPTS];
#endif

OS_REG_TYPE OS_TrapHandler(OS_REG_TYPE mcause, OS_REG_TYPE mepc) {
    if (mcause & MCAUSE_INT) {
        #if (USE_VECTORED_INT_MODE == 0)
            //
            // Caused by interrupt: call appropriate high-level handler.
            //
            _apfIRQHandler[mcause & MCAUSE_CAUSE]();
        #else
            //
            // In vectored mode, user mode software interrupt ambiguously shares
            // a vector with synchronous exceptions. If user mode software interrupt
            // is to be used by the application, its handler could be called here.
            //
            _ISR_NotInstalled();
        #endif
    } else {
        //
        // Caused by synchronous trap: call fault handler.
        //
        _ExceptionHandler(mcause, mepc);
    }
    return mepc;
}
```

Note

`mepc` contains the address of the instruction that was executed when the interrupt was taken. It must eventually be returned by `OS_TrapHandler()` to continue regular program execution at that address once the interrupt completes.

In case of interrupts, `mepc` must never be modified by `OS_TrapHandler()` before returning it. In case of a synchronous traps, however, `mepc` can be used to examine the cause for the trap and to react accordingly (e.g. redirecting program execution elsewhere).

6.5.1.1.2 High-level interrupt service routines

The individual interrupt service routines for distinct core-local interrupt sources shall include a prologue and an epilogue as described in the generic embOS manual (both in direct mode and in vectored mode). A high-level service routine for any core-local interrupt source may therefore be implemented as shown in the example below.

Example

```
void ISR_Local0(void) {  
    OS_INT_Enter();  
    //  
    // Perform any functionality here.  
    //  
    OS_INT_Leave();  
}
```

Note

A CLINT's high-level interrupt service routine for *machine external interrupts* is, at the same time, the low-level interrupt service routine for the (external) interrupt controller (e.g. PLIC).

6.5.1.2 API functions for core-local interrupt handling

For core-local interrupt handling, embOS offers the following functions:

Function	Description	main	Priv Task	Unpriv Task	ISR	SW Timer
<code>OS_CLINT_ClearIntPending()</code>	Clears pending state of the specified core-local interrupt source.	•	•		•	•
<code>OS_CLINT_DisableInt()</code>	Disables the specified core-local interrupt source.	•	•		•	•
<code>OS_CLINT_EnableInt()</code>	Enables the specified core-local interrupt source.	•	•		•	•
<code>OS_CLINT_GetIntPending()</code>	Returns the current pending status of the specified core-local interrupt source.	•	•	•	•	•
<code>OS_CLINT_Init()</code>	Initializes core-local interrupt handling.	•				
<code>OS_CLINT_InstallISR()</code>	Installs the specified interrupt service routine in a RAM vector table.	•	•			
<code>OS_CLINT_SetIntPending()</code>	Sets the specified core-local interrupt source to pending state.	•	•		•	•
<code>OS_CLINT_SetDirectMode()</code>	Configures core-local interrupt handling to direct mode.	•				
<code>OS_CLINT_SetVectoredMode()</code>	Configures core-local interrupt handling to vectored mode.	•				

6.5.1.2.1 OS_CLINT_ClearIntPending()

Description

OS_CLINT_ClearIntPending() clears pending state of the specified core-local interrupt source.

Machine external and machine timer interrupt pending bits are read-only. The primary use of this function therefore is to clear machine software interrupts.

Prototype

```
void OS_CLINT_ClearIntPending(CLINT_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.

6.5.1.2.2 OS_CLINT_DisableInt()

Description

OS_CLINT_DisableInt() disables the specified core-local interrupt source.

Prototype

```
void OS_CLINT_DisableInt(CLINT_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.

6.5.1.2.3 OS_CLINT_EnableInt()

Description

OS_CLINT_EnableInt() enables the specified core-local interrupt source.

Prototype

```
void OS_CLINT_EnableInt(CLINT_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.

6.5.1.2.4 OS_CLINT_GetIntPending()

Description

OS_CLINT_GetIntPending() returns the current pending state of the specified core-local interrupt source.

Prototype

```
OS_BOOL OS_CLINT_GetIntPending(CLINT_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.

Return value

= 0: Specified interrupt source is not pending.
= 1: Specified interrupt source is pending.

6.5.1.2.5 OS_CLINT_Init()

Description

OS_CLINT_Init() initializes core-local interrupt handling.
Must be called *prior* to OS_Start() and *before* calling any other OS_CLINT_*() function.

Prototype

```
void OS_CLINT_Init(OS_U8 NumInterrupts,  
OS_IRQ_HANDLER* apfISR[]);
```

Parameters

Parameter	Description
NumInterrupts	Number of supported core-local interrupt sources. Requires a minimum of 16 and may not exceed 32 (with RV32I).
apfISR	Pointer to a RAM vector table base. When using vectored mode or a ROM vector table in direct mode, this parameter must be NULL.

6.5.1.2.6 OS_CLINT_InstallISR()

Description

OS_CLINT_InstallISR() installs the specified interrupt service routine for the specified core-local interrupt source in a RAM vector table that was configured via OS_CLINT_Init(). This function must not be called when using vectored mode or a ROM vector table in direct mode.

Prototype

```
OS_IRQ_HANDLER* OS_CLINT_InstallISR(CLINT_IRQn IRQIndex,
                                     OS_IRQ_HANDLER* pfISR);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.
pfISR	Pointer to the interrupt service routine to be installed.

Return value

Pointer to the previously installed interrupt service routine.

6.5.1.2.7 OS_CLINT_SetIntPending()

Description

OS_CLINT_SetIntPending() sets the specified core-local interrupt source to pending state. Machine external and machine timer interrupt pending bits are read-only. The primary use of this function therefore is to trigger machine software interrupts.

Prototype

```
void OS_CLINT_SetIntPending(CLINT_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the core-local interrupt source by its index.

6.5.1.2.8 OS_CLINT_SetDirectMode()

Description

Configures core-local interrupt handling to direct mode. Must be called prior to OS_Start().

Prototype

```
void OS_CLINT_SetDirectMode(void);
```

6.5.1.2.9 OS_CLINT_SetVectoredMode()

Description

Configures core-local interrupt handling to vectored mode. Must be called prior to OS_Start() and expects the vector table to be called *vtrap_entry*.

Prototype

```
void OS_CLINT_SetVectoredMode(void);
```

6.5.2 Global interrupt handling using PLIC

The generic "*RISC-V Platform-Level Interrupt Controller*" (*PLIC*) is defined by the *RISC-V Privileged Architecture Version 1.10*.

6.5.2.1 Implementing global interrupt handlers in "C"

6.5.2.1.1 Low-level interrupt service routine

The individual interrupt service routines for global interrupt sources need to be dispatched by a common low-level service routine. Since this low-level service routine needs to call embOS API functions, it must include a prologue and an epilogue as described in the generic embOS manual. Typically, embOS for RISC-V sample projects using PIC will implement the low-level service routine in their respective *RTOSInit*.c* as shown in the example below.

```
static OS_IRQ_HANDLER* _apfIRQHandler[PLIC_NUM_INTERRUPTS];

void ISR_M_External(void) {
    OS_U32 IRQIndex;

    OS_INT_Enter();
    IRQIndex = OS_PLIC_ClaimInt();    // Claim highest-priority global IRQ.
    if (IRQIndex != 0u) {            // "0" indicates no IRQ was pending.
        _apfIRQHandler[IRQIndex](); // Call appropriate handler.
        OS_PLIC_CompleteInt(IRQIndex); // Signal interrupt completion to PLIC.
    }
    OS_INT_Leave();
}
```

Note

A low-level interrupt service routine for the PLIC is, at the same time, the CLINT high-level interrupt service routine for *machine external interrupts*.

6.5.2.1.2 High-level interrupt service routines

The individual interrupt service routines for distinct global interrupt sources do not need to include a prologue and an epilogue as described in the manual, since these were already included in the low-level service routine. A high-level service routine for any global interrupt source may therefore be implemented as shown in the example below.

```
void ISR_External_S0(void) {
    //
    // Perform any functionality here.
    //
}
```

6.5.2.2 API functions for using PLIC

Function	Description	main	Priv Task	Unpriv Task	ISR	SW Timer
<code>OS_PLIC_ClaimInt()</code>	Retrieves the index of highest-priority pending global interrupt and clears pending condition				•	
<code>OS_PLIC_CompleteInt()</code>	Notifies PLIC of ISR completion				•	
<code>OS_PLIC_DisableInt()</code>	Disables the specified global interrupt source	•	•		•	•
<code>OS_PLIC_EnableInt()</code>	Enables the specified global interrupt source	•	•		•	•
<code>OS_PLIC_GetIntPriority()</code>	Returns the current interrupt priority for the specified interrupt source	•	•	•	•	•
<code>OS_PLIC_GetIntThreshold()</code>	Returns the current interrupt priority threshold	•	•	•	•	•
<code>OS_PLIC_Init()</code>	Configures PLIC base address and RAM vector table address	•				
<code>OS_PLIC_InstallISR()</code>	Installs an global interrupt handler	•	•			
<code>OS_PLIC_SetIntPriority()</code>	Sets the priority of the specified global interrupt	•	•		•	•
<code>OS_PLIC_SetIntThreshold()</code>	Configures the IRQ threshold, masking lower-priority global interrupts	•	•		•	•

6.5.2.2.1 OS_PLIC_ClaimInt()

Description

OS_PLIC_ClaimInt() is used to retrieve the ID of the highest-priority pending global interrupt. Clears the corresponding source's pending bit.

Prototype

```
OS_U32 OS_PLIC_ClaimInt(void);
```

Return value

OS_U32: Interrupt index

6.5.2.2.2 OS_PLIC_CompleteInt()

Description

OS_PLIC_CompleteInt() is used to signal ISR completion to the PLIC.

Prototype

```
void OS_PLIC_CompleteInt(OS_U32 IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index

6.5.2.2.3 OS_PLIC_DisableInt()

Description

OS_PLIC_DisableInt() is used to disable the specified global interrupt.

Prototype

```
void OS_PLIC_DisableInt(OS_U32 IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index

6.5.2.2.4 OS_PLIC_EnableInt()

Description

OS_PLIC_EnableInt() is used to enable the specified global interrupt.

Prototype

```
void OS_PLIC_EnableInt(OS_U32 IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index

6.5.2.2.5 OS_PLIC_GetIntPriority()

Description

OS_PLIC_GetIntPriority() retrieves the current priority for the specified global interrupt source.

Prototype

```
OS_U32 OS_PLIC_GetIntPriority(OS_U32 IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index

Return value

OS_U32: Current interrupt priority of the specified interrupt source

6.5.2.2.6 OS_PLIC_GetIntThreshold()

Description

OS_PLIC_GetIntThreshold() retrieves the current global interrupt priority threshold.

Prototype

```
OS_U32 OS_PLIC_GetIntThreshold(void);
```

Return value

OS_U32: Current interrupt priority threshold

6.5.2.2.7 OS_PLIC_Init()

Description

OS_PLIC_Init() is used to configure the RAM vector table base address for global interrupts.

Prototype

```
void OS_PLIC_Init(OS_U32      BaseAddr,
                  OS_U16      NumInterrupts,
                  OS_U32      NumPriorities,
                  OS_IRQ_HANDLER* apfISR[]);
```

Parameters

Parameter	Description
BaseAddr	PLIC base address
NumInterrupts	Number of supported global interrupt sources
NumPriorities	Number of supported global interrupt priorities
apfISR	Pointer to RAM vector table base

6.5.2.2.8 OS_PLIC_InstallISR()

Description

OS_PLIC_InstallISR() is used to install the specified global interrupt handler in the RAM vector table.

Prototype

```
OS_IRQ_HANDLER* OS_PLIC_InstallISR(OS_U32      IRQIndex,
                                   OS_IRQ_HANDLER* pfISR);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index
pfISR	Address of interrupt handler

Return value

OS_IRQ_HANDLER*: Address of the previously installed interrupt handler, or NULL if not applicable.

6.5.2.2.9 OS_PLIC_SetIntPriority()

Description

OS_PLIC_SetIntPriority() is used to configure the interrupt priority for the specified global interrupt.

Prototype

```
OS_U32 OS_PLIC_SetIntPriority(OS_U32 IRQIndex,
                             OS_U32 Prio);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index
Prio	Interrupt priority

Return value

OS_U32: Previous priority which was assigned before

6.5.2.2.10 OS_PLIC_SetIntThreshold()

Description

OS_PLIC_SetIntThreshold() is used to configure the interrupt priority threshold. All priorities less than or equal to [Threshold](#) will be masked.

Prototype

```
void OS_PLIC_SetIntThreshold(OS_U32 Threshold);
```

Parameters

Parameter	Description
Threshold	Desired interrupt priority threshold

6.5.3 Global interrupt handling using PIC

6.5.3.1 Global interrupt sources

An implementation of *Lattice's "Programmable Interrupt Controller" (PIC)* may support a minimum of 1 and a maximum of 8 global interrupt sources. When using embOS API functions for global interrupt sources, these may be specified using the following enumeration:

Global interrupt source	Numerical value
IRQ_S0	0
IRQ_S1	1
IRQ_S2	2
IRQ_S3	3
IRQ_S4	4
IRQ_S5	5
IRQ_S6	6
IRQ_S7	7

6.5.3.2 Global interrupt priority

With a *PIC* implementation, all global interrupt sources are executed at the same priority. Which interrupt service routine is executed first when several interrupts are pending at the same time depends on the low-level interrupt service routine.

6.5.3.3 Global interrupt polarity

The polarity of any global interrupt source may be configured using the following enumeration:

PIC interrupt polarity	Numerical value
PIC_INTPOLARITY_HIGH	0
PIC_INTPOLARITY_LOW	1

6.5.3.4 Implementing global interrupt handlers in "C"

6.5.3.4.1 Low-level interrupt service routine

The individual interrupt service routines for global interrupt sources need to be dispatched by a common low-level service routine. Since this low-level service routine needs to call embOS API functions, it must include a prologue and an epilogue as described in the generic embOS manual. Typically, embOS for RISC-V sample projects using PIC will implement the low-level service routine in their respective *RTOSInit*.c* as shown in the example below.

```
#if (EXTEND_GLOBAL_ISR_CONTEXT == 0)
static OS_IRQ_HANDLER* _apfIRQHandler[PIC_NUM_INTERRUPTS];
#else
static OS_IRQ_HANDLER_CONTEXT* _apfIRQHandler[PIC_NUM_INTERRUPTS];
#endif

void ISR_M_External(void) {
    PIC_IRQn IRQIndex;

    OS_INT_Enter();
    //
    // By sequentially serving all pending global interrupts at once, this
    // exemplary implementation aims at accelerating interrupt handling since
    // interrupted contexts do not need to be saved and restored repeatedly.
    // By iterating from IRQ_S0 to PIC_NUM_INTERRUPTS, this exemplary implementation
    // prioritizes global interrupt sources by their index (in ascending order).
    //
    for (IRQIndex = IRQ_S0; IRQIndex < PIC_NUM_INTERRUPTS; IRQIndex++) {
        if (OS_PIC_GetIntPending(IRQIndex) == 1u) {
#if (EXTEND_GLOBAL_ISR_CONTEXT == 0)
            _apfIRQHandler[IRQIndex]();
#else
            _apfIRQHandler[IRQIndex]->pfISR(_apfIRQHandler[IRQIndex]->pContext);
#endif
            OS_PIC_ClearIntPending(IRQIndex);
        }
    }
    OS_INT_Leave();
}
```

Note

A low-level interrupt service routine for the PIC is, at the same time, the CLINT high-level interrupt service routine for *machine external interrupts*.

6.5.3.4.2 High-level interrupt service routines

The individual interrupt service routines for distinct global interrupt sources do not need to include a prologue and an epilogue as described in the manual, since these were already included in the low-level service routine. A high-level service routine for any global interrupt source may therefore be implemented as shown in the example below.

```
#if (EXTEND_GLOBAL_ISR_CONTEXT == 0)
void ISR_External_S0(void) {
#else
void ISR_External_S0(void* pContext) {
#endif
    //
    // Perform any functionality here.
    //
}
```

6.5.3.5 API functions for using PIC

Function	Description	main	Priv Task	Unpriv Task	ISR	SW Timer
<code>OS_PIC_ClearIntPending()</code>	Clears pending state of the specified global interrupt source.	•	•		•	•
<code>OS_PIC_DisableInt()</code>	Disables the specified global interrupt source.	•	•		•	•
<code>OS_PIC_EnableInt()</code>	Disables the specified global interrupt source.	•	•		•	•
<code>OS_PIC_GetIntPending()</code>	Returns the current pending status of the specified global interrupt source.	•	•	•	•	•
<code>OS_PIC_GetIntPolarity()</code>	Returns the current polarity of the specified global interrupt source.	•	•	•	•	•
<code>OS_PIC_Init()</code>	Initializes PIC interrupt handling.	•				
<code>OS_PIC_Init_Ex()</code>	Initializes extended PIC interrupt handling.	•				
<code>OS_PIC_InstallISR()</code>	Installs the specified interrupt service routine in a RAM vector table.	•	•			
<code>OS_PIC_InstallISR_Ex()</code>	Installs the specified extended interrupt service routine in a RAM vector table.	•	•			
<code>OS_PIC_SetIntPending()</code>	Sets the specified global interrupt source to pending state.	•	•		•	•
<code>OS_PIC_SetIntPolarity()</code>	Sets the specified polarity for the specified global interrupt source.	•	•		•	•

6.5.3.5.1 OS_PIC_ClearIntPending()

Description

OS_PIC_ClearIntPending() clears pending state of the specified global interrupt source.

Prototype

```
void OS_PIC_ClearIntPending(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.

6.5.3.5.2 OS_PIC_DisableInt()

Description

OS_PIC_DisableInt() disables the specified global interrupt source.

Prototype

```
void OS_PIC_DisableInt(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.

6.5.3.5.3 OS_PIC_EnableInt()

Description

OS_PIC_EnableInt() enables the specified global interrupt source.

Prototype

```
void OS_PIC_EnableInt(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.

6.5.3.5.4 OS_PIC_GetIntPending()

Description

`OS_PIC_GetIntPending()` returns the current pending status of the specified global interrupt source.

Prototype

```
OS_BOOL OS_PIC_GetIntPending(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
<code>IRQIndex</code>	Specifies the interrupt source by its index.

Return value

= 0: Specified interrupt source is not pending.
= 1: Specified interrupt source is pending.

6.5.3.5.5 OS_PIC_GetIntPolarity()

Description

`OS_PIC_GetIntPolarity()` returns the currently configured polarity of the specified global interrupt source.

Prototype

```
PIC_INTPOLARITY OS_PIC_GetIntPolarity(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
<code>IRQIndex</code>	Specifies the interrupt source by its index.

Return value

= `OS_PIC_INTPOLARITY_HIGH`: Specified interrupt source is configured to active high.
= `OS_PIC_INTPOLARITY_LOW`: Specified interrupt source is configured to active low.

6.5.3.5.6 OS_PIC_Init()

Description

OS_PIC_Init() initializes PIC interrupt handling.

Must not be called when using (OS_PIC_Init_Ex()), but must otherwise be called *prior* to OS_Start() and *before* calling any other OS_PIC_*() function.

Prototype

```
void OS_PIC_Init(OS_U32      BaseAddr,
                 OS_U8      NumInterrupts,
                 OS_IRQ_HANDLER* apfISR[ ]);
```

Parameters

Parameter	Description
BaseAddr	PIC base address.
NumInterrupts	Number of supported global interrupt sources. Requires a minimum of 1 and may not exceed 8.
apfISR	Pointer to a RAM vector table base. When using a ROM vector table, this parameter must be NULL.

Example

```
static OS_IRQ_HANDLER* _apfIRQHandler[PIC_NUM_INTERRUPTS];
void foo(void) {
    OS_PIC_Init(PIC_BASE_ADDR, PIC_NUM_INTERRUPTS, _apfIRQHandler);
}
```

6.5.3.5.7 OS_PIC_Init_Ex()

Description

OS_PIC_Init_Ex() initializes extended PIC interrupt handling.

Must not be called when using (OS_PIC_Init()), but must otherwise be called *prior* to OS_Start() and *before* calling any other OS_PIC_*() function.

Prototype

```
void OS_PIC_Init_Ex(OS_U32      BaseAddr,
                    OS_U8      NumInterrupts,
                    OS_IRQ_HANDLER_CONTEXT* apfISR[ ]);
```

Parameters

Parameter	Description
BaseAddr	PIC base address.
NumInterrupts	Number of supported global interrupt sources. Requires a minimum of 1 and may not exceed 8.
apfISR	Pointer to an extended RAM vector table base. When using a ROM vector table, this parameter must be NULL.

Example

```
static OS_IRQ_HANDLER_CONTEXT* _apfIRQHandler[PIC_NUM_INTERRUPTS];
void foo(void) {
    OS_PIC_Init_Ex(PIC_BASE_ADDR, PIC_NUM_INTERRUPTS, _apfIRQHandler);
}
```


6.5.3.5.8 OS_PIC_InstallISR()

Description

OS_PIC_InstallISR() installs the specified interrupt service routine for the specified global interrupt source in a RAM vector table that was configured via OS_PIC_Init(). This function must not be called when using a ROM vector table.

Prototype

```
OS_IRQ_HANDLER* OS_PIC_InstallISR(PIC_IRQn      IRQIndex,  
                                   OS_IRQ_HANDLER* pfISR);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.
pfISR	Pointer to the interrupt service routine to be installed.

Return value

Pointer to the previously installed interrupt service routine.

Example

```
static void _ISR_External2(void) {  
    //  
    // Perform any functionality.  
    //  
}  
  
void foo(void) {  
    (void)OS_PIC_InstallISR(IRQ_S2, _ISR_External2);  
}
```

6.5.3.5.9 OS_PIC_InstallISR_Ex()

Description

OS_PIC_InstallISR_Ex() installs the specified extended interrupt service routine for the specified global interrupt source in a RAM vector table that was configured via OS_PIC_Init_Ex().

This function must not be called when using a ROM vector table.

Prototype

```
OS_IRQ_HANDLER_EX* OS_PIC_InstallISR_Ex(PIC_IRQn      IRQIndex,  
                                         OS_IRQ_HANDLER_EX* pfISR,  
                                         void*        pContext);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.
pfISR	Pointer to the extended interrupt service routine to be installed.
pContext	Pointer to the context that should be passed to the interrupt service routine.

Return value

Pointer to the previously installed extended interrupt service routine.

Example

```
static void _ISR_External2(void* pContext) {  
    if (((int)pContext) == 42) {  
        //  
        // Perform some functionality.  
        //  
    } else {  
        //  
        // Perform some other functionality.  
        //  
    }  
}  
  
void foo(void) {  
    (void)OS_PIC_InstallISR_Ex(IRQ_S2, _ISR_External2, (void*)42);  
}
```

6.5.3.5.10 OS_PIC_SetIntPending()

Description

OS_PIC_SetIntPending() sets the specified global interrupt source to pending state.

Prototype

```
void OS_PIC_SetIntPending(PIC_IRQn IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.

6.5.3.5.11 OS_PIC_SetIntPolarity()

Description

OS_PIC_SetIntPolarity() configures the specified polarity for the specified global interrupt source.

Prototype

```
void OS_PIC_SetIntPolarity(PIC_IRQn      IRQIndex,  
                           PIC_INTPOLARITY Polarity);
```

Parameters

Parameter	Description
IRQIndex	Specifies the interrupt source by its index.
Polarity	Polarity to configure (PIC_INTPOLARITY_HIGH or PIC_INTPOLARITY_LOW).

6.5.4 Core-local and global interrupt handling using ECLIC

When using *NucleiSys' "Enhanced Core-Local Interrupt Controller" (ECLIC)*, both core-local and global interrupt sources are managed by the ECLIC and behave the same way.

6.5.4.1 Interrupt levels and priorities

For CLIC interrupt controllers, each interrupt has an 8-bit control register which is used to specify the interrupt level and priority. Depending on how many of the control bits are implemented on the device, there can be a maximum of 256 different combinations of interrupt level and priority for an interrupt. The level is stored on the MSB side of the control register, while the remaining bits are used for the priority. How many of the available control bits are used for the interrupt level can be specified. By default, all control bits are used for the interrupt level. That is, the number of level bits is set to 8.

Interrupt level

Interrupts with higher interrupt level can interrupt interrupts with lower interrupt level, resulting in interrupt nesting. Furthermore, interrupts can be nested by synchronous exceptions. The synchronous exception is always taken with the current interrupt level. That means that interrupts and exceptions with greater interrupt level are able to interrupt an exception with lower interrupt level.

Interrupt priority

Interrupts with higher priority won't interrupt interrupts with same interrupt level even if the current active interrupt has a lower priority. The interrupt priority is used only for interrupt arbitration if there are two pending interrupts with the same interrupt level.

6.5.4.2 API functions for using ECLIC

To handle ECLIC interrupts, embOS offers the following functions:

Function	Description
<code>OS_ECLIC_DisableInt()</code>	Disables the specified interrupt source.
<code>OS_ECLIC_EnableInt()</code>	Enables the specified interrupt source.
<code>OS_ECLIC_GetNumLevelBits()</code>	Returns how many bits of the interrupt control register are used for the interrupt level.
<code>OS_ECLIC_GetIntPriority()</code>	Returns the interrupt control value of the specified interrupt.
<code>OS_ECLIC_GetIntThreshold()</code>	Returns the current interrupt level threshold.
<code>OS_ECLIC_Init()</code>	Initializes the ECLIC interrupt controller.
<code>OS_ECLIC_SetNumLevelBits()</code>	Specifies how many bits of the interrupt control register shall be used for the interrupt level.
<code>OS_ECLIC_SetIntPriority()</code>	Sets the interrupt control value of the specified interrupt.
<code>OS_ECLIC_SetIntThreshold()</code>	Configures the IRQ threshold, masking lower-level interrupts.

6.5.4.2.1 OS_ECLIC_DisableInt()

Description

OS_ECLIC_DisableInt() disables the specified interrupt.

Prototype

```
void OS_ECLIC_DisableInt(OS_UINT IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index.

6.5.4.2.2 OS_ECLIC_EnableInt()

Description

OS_ECLIC_EnableInt() enables the specified interrupt.

Prototype

```
void OS_ECLIC_EnableInt(OS_UINT IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index.

6.5.4.2.3 OS_ECLIC_GetNumLevelBits()

Description

OS_ECLIC_GetNumLevelBits() returns how many bits of the interrupt control register are used for the interrupt level.

Prototype

```
OS_U8 OS_ECLIC_GetNumLevelBits(void);
```

Return value

The number of level bits.

6.5.4.2.4 OS_ECLIC_GetIntPriority()

Description

OS_ECLIC_GetIntPriority() returns the interrupt control value of the specified interrupt.

Prototype

```
OS_U8 OS_ECLIC_GetIntPriority(OS_UINT IRQIndex);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index.

Return value

The interrupt control value containing the interrupt level and priority.

6.5.4.2.5 OS_ECLIC_GetIntThreshold()

Description

OS_ECLIC_GetIntThreshold() returns the current interrupt level threshold.

Prototype

```
OS_U8 OS_ECLIC_GetIntThreshold(void);
```

Return value

The current interrupt level threshold.

6.5.4.2.6 OS_ECLIC_Init()

Description

OS_ECLIC_Init() initializes the ECLIC interrupt controller.

Prototype

```
void OS_ECLIC_Init(void* pBaseAddr,
                  void* pVectorTable,
                  void* pTrapHandler);
```

Parameters

Parameter	Description
pBaseAddr	Base address of the memory mapped ECLIC SFRs.
pVectorTable	Address of the vector table containing the ISR handler addresses. Needs to be at least 64-bit aligned. Alignment increases with size of the vector table (See additional information).
pTrapHandler	Address of the synchronous trap handler. Needs to be 64-bit aligned.

Additional information

The vector table address is constrained to be at least 64-byte aligned. This alignment should be considered when linking the application.

```

0 to   16 max. interrupts =>   64-byte aligned
17 to   32 max. interrupts =>  128-byte aligned
33 to   64 max. interrupts =>  256-byte aligned
65 to  128 max. interrupts =>  512-byte aligned
129 to  256 max. interrupts => 1024-byte aligned
257 to  512 max. interrupts => 2048-byte aligned
513 to 1024 max. interrupts => 4096-byte aligned
1025 to 2048 max. interrupts => 8192-byte aligned
2045 to 4096 max. interrupts =>16384-byte aligned
```


6.5.4.2.7 OS_ECLIC_SetNumLevelBits()

Description

OS_ECLIC_SetNumLevelBits() Specifies how many bits of the interrupt control register shall be used for the interrupt level.

Prototype

```
void OS_ECLIC_SetNumLevelBits(OS_U8 NumLevelBits);
```

Parameters

Parameter	Description
NumLevelBits	Number of level bits that shall be used. Valid value are 0-8.

6.5.4.2.8 OS_ECLIC_SetIntPriority()

Description

OS_ECLIC_SetIntPriority() sets the interrupt control bits of the specified interrupt. The interrupt control register consists of two parts: the interrupt level and the interrupt priority, depending on the number of level bits used. The interrupt level bits are on the MSB side, while priority bits are on the LSB side. The number of level bits used is by default set to 8, but can be changed by a call to OS_ECLIC_SetNumLevelBits().

Prototype

```
void OS_ECLIC_SetIntPriority(OS_UINT IRQIndex,  
                             OS_U8   InterruptPriority);
```

Parameters

Parameter	Description
IRQIndex	Interrupt index.
InterruptPriority	Interrupt level and priority.

6.5.4.2.9 OS_ECLIC_SetIntThreshold()

Description

OS_ECLIC_SetIntThreshold() configures the IRQ threshold, masking lower-level interrupts.

Prototype

```
void OS_ECLIC_SetIntThreshold(OS_U8 Threshold);
```

Parameters

Parameter	Description
Threshold	Desired interrupt priority threshold.

Example

For a device with 5 implemented control bits it is possible to use $2^5=32$ different values for interrupt priority arbitration. If the number of level bits is set to 3, 8 levels and 4 priorities can be used. In order to set an interrupt to level 7 and priority 2, the value $((7 << (5 - 3)) | 2) = 30$ has to be passed as interrupt priority.

6.6 Interrupt-stack switching

embOS for RISC-V offers API functions for interrupt stack switching. Please refer to chapter *Interrupt stack* on page 26 for more information.

Chapter 7

RTT and SystemView

7.1 SEGGER Real Time Transfer

With SEGGER's Real Time Transfer (RTT) it is possible to output information from the target microcontroller as well as sending input to the application at a very high speed without affecting the target's real time behavior. SEGGER RTT can be used with any J-Link model and any supported target processor which allows background memory access.

RTT is included with many embOS start projects. These projects are by default configured to use RTT for debug output. Some IDEs, such as SEGGER Embedded Studio, support RTT and display RTT output directly within the IDE. In case the used IDE does not support RTT, SEGGER's J-Link RTT Viewer, J-Link RTT Client, and J-Link RTT Logger may be used instead to visualize your application's debug output.

For more information on SEGGER Real Time Transfer, refer to [segger.com/jlink-rtt](https://www.segger.com/jlink-rtt).

7.2 SEGGER SystemView

SEGGER SystemView is a real-time recording and visualization tool to gain a deep understanding of the runtime behavior of an application, going far beyond what debuggers are offering. The SystemView module collects and formats the monitor data and passes it to RTT.

SystemView is included with many embOS start projects. These projects are by default configured to use SystemView in debug builds. The associated PC visualization application, SystemView, is not shipped with embOS. Instead, the most recent version of that application is available for download from our website.

SystemView is initialized by calling `SEGGER_SYSVIEW_Conf()` on the target microcontroller. This call is performed within `OS_InitHW()` of the respective `RTOSInit*.c` file. As soon as this function was called, the connection of the SystemView desktop application to the target can be started. In order to remove SystemView from the target application, remove the `SEGGER_SYSVIEW_Conf()` call, the `SEGGER_SYSVIEW.h` include directive as well as any other reference to `SEGGER_SYSVIEW_*` like `SEGGER_SYSVIEW_TickCnt`.

For more information on SEGGER SystemView and the download of the SystemView desktop application, refer to [segger.com/systemview](https://www.segger.com/systemview).

Note

SystemView uses embOS timing API to get at start the current system time. This requires that `OS_TIME_ConfigSysTimer()` was called before `SEGGER_SYSVIEW_Start()` is called or the SystemView PC application is started.

Chapter 8

embOS Thread Script

8.1 Introduction

A thread script is included with every board support package shipped with embOS. This script may be used to display various information about the system, the tasks and created embOS objects like timers, mailboxes, queues, semaphores, memory pools, events and watchdogs.

When creating a custom project, the thread script may be added to the respective project's options ("Debug" -> "Debugger" -> "Threads Script File").

8.2 How to use it

To enable the threads window, click on View in the menu bar and choose the option Threads in the sub-menu More Debug Windows. Alternatively, the threads window may also be enabled by pressing [Ctrl + Alt + H]. The object lists and system information within the threads window can be enabled or disabled via the Show Lists dropdown menu. The threads window gets updated every time the application is halted. It should closely resemble the screenshot below:

Threads								
Reload Script			Refresh			Show Lists		
						Edit Script		
Priority	Id	Name	Status	Timeout	Stack Info	Run Count	Time Slice	Task Events
100	0x20000054	HP Task	Delayed	10 (20)	196 / 512 @ 0x200000B0	2	0 / 2	0x0
75	0x200002B0	MP Task	Delayed	1 (11)	192 / 512 @ 0x2000030C	2	0 / 2	0x0
65	0x20000768	Eval Task	Executing		168 / 512 @ 0x200007C4	1	0 / 2	0x0
50	0x2000050C	LP Task	Ready		252 / 512 @ 0x20000568	3	0 / 2	0x0
6	0x20000B90	Background Task 5	Waiting for message in Mailbox 0x200012B8 (Mailbox 1)		176 / 256 @ 0x200010EC	1	0 / 2	0x0
5	0x20000B34	Background Task 4	Waiting for message in Queue 0x20001324 (Queue 0)		176 / 256 @ 0x20000FEC	1	0 / 2	0x0
4	0x20000AD8	Background Task 3	Waiting for Event Object 0x20001410 (Event 0)		168 / 256 @ 0x20000EEC	1	0 / 2	0x0
3	0x20000A7C	Background Task 2	Waiting for Memory Pool 0x200013D4 (MemPool 0)		168 / 256 @ 0x20000DEC	1	0 / 2	0x0
2	0x20000A20	Background Task 1	Waiting for Semaphore 0x200013B8 (Semaphore 0)		168 / 256 @ 0x20000CEC	1	0 / 2	0x0
1	0x200009C4	Background Task 0	Waiting for Mutex 0x2000122C (Mutex 0)		168 / 256 @ 0x20000BEC	1	0 / 2	0x0
Id(Timers)				Name	Hook	Timeout	Period	
0x200011EC				TimerLong	0x675 (_TimerLong_Callback)	190 (200)	200	
0x2000120C				TimerShort	0x691 (_TimerShort_Callback)	10 (20)	20	
Id(Mailboxes)		Name	Messages	Message Size	Buffer Address	Waiting Tasks	In Use	
0x2000124C		Mailbox 0	1/8	8	0x20001278		False	
0x200012B8		Mailbox 1	0/8	8	0x200012E4	0x20000B90 (Background Task 5)	False	
Id(Queues)		Name	Messages	Buffer Address	Buffer Size	Waiting Tasks		
0x20001324		Queue 0	0	0x20001358	96	0x20000B34 (Background Task 4)		
Id(Mutexes)		Name	Owner	Use Counter	Waiting Tasks			
0x2000122C		Mutex 0	0x200002B0 (MP Task)	2	0x200009C4 (Background Task 0)			
0x20001EE0				0				
Id(Semaphores)		Name	Count	Waiting Tasks				
0x200013B8		Semaphore 0	0	0x20000A20 (Background Task 1)				
Id(Memory Pools)		Name	Total Blocks	Block Size	Max. Usage	Buffer Address	Waiting Tasks	
0x200013D4		MemPool 0	0/3	4	3	0x20001404	0x20000A7C (Background Task 2)	
Id(Event Objects)		Name	Signaled	Reset Mode	Mask Mode	Waiting Tasks		
0x20001410		Event 0	0x0	Semiauto	OR Logic	0x20000AD8 (Background Task 3)		
Id(Watchdogs)				Name	Timeout	Period		
0x20001438				WatchdogHP	250 (260)	250		
0x20001450				WatchdogMP	500 (510)	500		
0x20001468				WatchdogLP	740 (750)	750		
0x20001480				WatchdogEval	1000 (1010)	1000		
System Information						Value		
Active Task						0x20000768 (Eval Task)		
Current Task						0x20000768 (Eval Task)		
embOS Build						Debug + Profiling (DP)		
embOS Version						5.00a		
System Status						O.K.		
System Time						10		

Some of this information is available in debug builds of embOS only. Using other builds, the respective entries will show "n.a." to indicate this.

8.2.1 Task List

Priority	Id	Name	Status	Timeout	Stack Info	Run Count	Time Slice	Task Events
100	0x20000054	HP Task	Delayed	10 (20)	196 / 512 @ 0x200000B0	2	0 / 2	0x0
75	0x200002B0	MP Task	Delayed	1 (11)	192 / 512 @ 0x2000030C	2	0 / 2	0x0
65	0x20000768	Eval Task	Executing		168 / 512 @ 0x200007C4	1	0 / 2	0x0
50	0x2000050C	LP Task	Ready		252 / 512 @ 0x20000568	3	0 / 2	0x0
6	0x20000B90	Background Task 5	Waiting for message in Mailbox 0x200012B8 (Mailbox 1)		176 / 256 @ 0x200010EC	1	0 / 2	0x0
5	0x20000B34	Background Task 4	Waiting for message in Queue 0x20001324 (Queue 0)		176 / 256 @ 0x20000FEC	1	0 / 2	0x0
4	0x20000AD8	Background Task 3	Waiting for Event Object 0x20001410 (Event 0)		168 / 256 @ 0x20000EEC	1	0 / 2	0x0
3	0x20000A7C	Background Task 2	Waiting for Memory Pool 0x200013D4 (MemPool 0)		168 / 256 @ 0x20000DEC	1	0 / 2	0x0
2	0x20000A20	Background Task 1	Waiting for Semaphore 0x200013B8 (Semaphore 0)		168 / 256 @ 0x20000CEC	1	0 / 2	0x0
1	0x200009C4	Background Task 0	Waiting for Mutex 0x2000122C (Mutex 0)		168 / 256 @ 0x20000BEC	1	0 / 2	0x0

The task list displays various information about the running tasks:

Column	Description
Priority	This is the priority of the task
Id	The address of a tasks task control block
Name	The name of the task
Status	The current status of the task
Timeout	Time in ms till the task gets called again
Stack Info	Shows the maximum usage (left) of the total stack for this task (right) in bytes
Run Count	Shows how many times the task has been started since the last reset
Time Slice	Show the number of remaining and maximum time slices in ms if round robin scheduling is available
Task Events	Show the event mask of a task

Note

By default the thread script is limited to display a total of 25 tasks only. This limit may be changed inside the respective project's options ("Debug" -> "Debugger" -> "Thread Maximum").

8.2.2 Task sensitivity

In addition to the information displayed in the threads list, the threads script furthermore allows for the investigation of the register contents and the call stack of inactive tasks. To display this information, double click the entry of the respective task in the threads window. The register window and the call stack window will subsequently be updated to display information about the chosen task's state. To view this information, the call stack and the register window have to be enabled.

After double clicking the inactive task, the call stack window shows the last function that has been called by this task:

Also, the register window gets updated and shows the register contents of the inactive task:

8.2.3 Timers

Id(Timers)	Name	Hook	Timeout	Period
0x200011EC	TimerLong	0x675 (_TimerLong_Callback)	190 (200)	200
0x2000120C	TimerShort	0x691 (_TimerShort_Callback)	10 (20)	20

The timers list displays various information about active timers:

Column	Description
Id(Timers)	The timer's address
Name	If available, the respective object identifier is shown here
Hook	The function address that is called after the timeout
Timeout	The point in time in ms when the timer finishes waiting
Period	The time period in ms the timer runs

8.2.4 Mailboxes

Id(Mailboxes)	Name	Messages	Message Size	Buffer Address	Waiting Tasks	In Use
0x2000124C	Mailbox 0	1/8	8	0x20001278		False
0x200012B8	Mailbox 1	0/8	8	0x200012E4	0x20000B90 (Background Task 5)	False

The mailboxes list displays various information about used mailboxes:

Column	Description
Id(Mailboxes)	The mailbox's address
Name	If available, the respective object identifier is shown here
Messages	The number of messages in a mailbox and the maximum number of messages the mailbox can hold
Message Size	The size of an individual message in bytes
Buffer Address	The message buffer address
Waiting Tasks	The list of tasks that are waiting for the mailbox (address and, if available, name)

8.2.5 Queues

Id(Queues)	Name	Messages	Buffer Address	Buffer Size	Waiting Tasks
0x20001324	Queue 0	0	0x20001358	96	0x20000B34 (Background Task 4)

The queues list displays various information about used queues:

Column	Description
Id(Queues)	The queue's address

Column	Description
Name	If available, the respective object identifier is shown here
Messages	The number of messages in a queue
Buffer Address	The message buffer address
Buffer Size	The size of the message buffer in bytes
Waiting Tasks	The list of tasks that are waiting for the queue (address and, if available, name)

8.2.6 Mutexes

Id(Mutexes)	Name	Owner	Use Counter	Waiting Tasks
0x2000122C	Mutex 0	0x200002B0 (MP Task)	2	0x200009C4 (Background Task 0)
0x20001EE0			0	

The mutexes list displays various information about used mutexes:

Column	Description
Id(Mutexes)	The mutexes' address
Name	If available, the respective object identifier is shown here
Owner	The address and name of the owner task
Use Counter	Counts the number of times the mutex was claimed
Waiting Tasks	The list of tasks that are waiting for the mutex (address and, if available, name)

8.2.7 Semaphores

Id(Semaphores)	Name	Count	Waiting Tasks
0x200013B8	Semaphore 0	0	0x20000A20 (Background Task 1)

The semaphores list displays various information about used semaphores:

Column	Description
Id(Semaphores)	The semaphores' address
Name	If available, the respective object identifier is shown here
Count	Counts how often this semaphore can be claimed
Waiting Tasks	The list of tasks that are waiting for the semaphore (address and, if available, name)

8.2.8 Readers-writer lock

The readers-writer lock list displays various information about used readers-writer locks:

Column	Description
Id(RW Lock)	The readers-writer locks address
Name	If available, the respective object identifier is shown here
Status	If all tokens are taken the readers-writer lock is locked. Otherwise it is unlocked.
Max. number of tokens	The maximum numbers of token which were defined when the readers-writer lock was created.
Tokens left	The number of available tokens.

8.2.9 Memory Pools

Id(Memory Pools)	Name	Total Blocks	Block Size	Max. Usage	Buffer Address	Waiting Tasks
0x200013D4	MemPool 0	0/3	4	3	0x20001404	0x20000A7C (Background Task 2)

The memory pools list displays various information about used memory pools:

Column	Description
Id(Memory Pools)	The memory pool's address
Name	If available, the respective object identifier is shown here
Total Blocks	Shows the available blocks and the maximal number of blocks
Block Size	Shows the size of a single memory block
Max. Usage	Shows the maximal count of blocks which were simultaneously allocated
Buffer Address	The address of the memory pool buffer
Waiting Tasks	The list of tasks that are waiting for free memory blocks (address and, if available, name)

8.2.10 Event Objects

Id(Event Objects)	Name	Signaled	Reset Mode	Mask Mode	Waiting Tasks
0x20001410	Event 0	0x0	Semiauto	OR Logic	0x20000AD8 (Background Task 3)

The event objects list displays various information about used event objects:

Column	Description
Id(Event Objects)	The event object's address
Name	If available, the respective object identifier is shown here
Signaled	The hexadecimal value of the bit mask containing the signaled event bits
Reset Mode	The event object's reset mode
Mask Mode	The current mask mode indicating whether OR or AND logic is used to check if a task shall resume
Waiting Tasks	The list of tasks that are waiting for the event object (address and, if available, name)

8.2.11 Watchdogs

Id(Watchdogs)	Name	Timeout	Period
0x20001438	WatchdogHP	250 (260)	250
0x20001450	WatchdogMP	500 (510)	500
0x20001468	WatchdogLP	740 (750)	750
0x20001480	WatchdogEval	1000 (1010)	1000

The watchdogs list displays various information about used watchdogs:

Column	Description
Id(Watchdogs)	The watchdog's address
Name	If available, the respective object identifier is shown here
Timeout	The point in time in ms when the watchdog has to be fed
Period	The period in ms in which the watchdog has to be fed

8.2.12 System Information

The system information list displays various information about embOS.

System Information	Value
Active Task	0x20000768 (Eval Task)
Current Task	0x20000768 (Eval Task)
embOS Build	Debug + Profiling (DP)
embOS Version	5.00a
System Status	O.K.
System Time	10

Chapter 9

Technical data

9.1 Resource Usage

The memory requirements of embOS-Ultra (RAM and ROM) differs depending on the used features, CPU, compiler, and library model. The following values are measured using embOS library mode `OS_LIBMODE_XR`.

Module	Memory type	Memory requirements
embOS kernel	ROM	~2100 bytes
embOS kernel	RAM	~144 bytes
Task control block	RAM	48 bytes
Software timer	RAM	32 bytes
Task event	RAM	0 bytes
Event object	RAM	12 bytes
Mutex	RAM	16 bytes
Semaphore	RAM	8 bytes
RWLock	RAM	28 bytes
Mailbox	RAM	24 bytes
Queue	RAM	32 bytes
Watchdog	RAM	24 bytes
Fixed Block Size Memory Pool	RAM	32 bytes